



ASSEMBLY INSTRUCTION

Iso-Lateral Wide Chest HS-1014


SHAN DONG REALLEADER FITNESS CO., LTD

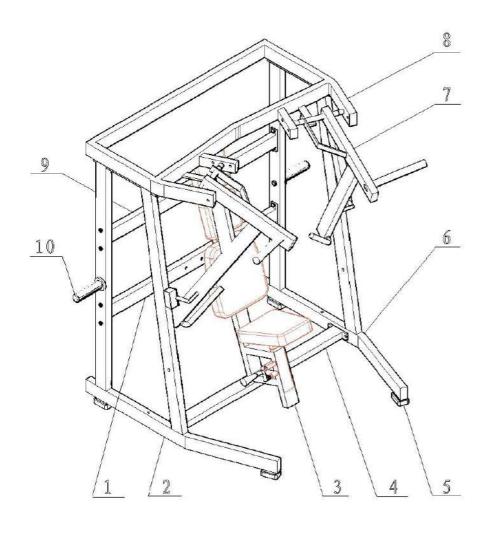


- 1 Beam (1)
- 2 Side Frame
- 3 Seat Frame
- 4 Beam (2)
- 5 Rubber Shoe
- 6 Side Frame
- 7 Arm
- 8 <u>Support</u> for Arm
- 9 <u>Beam (3)</u>
- 1@Barbell Sleeve

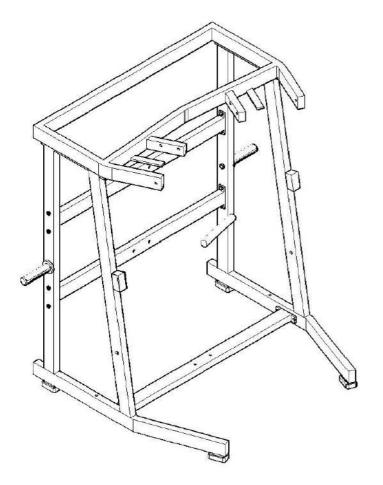

Connect side frames and support for arm with beam (1), beam (2) and beam (3).

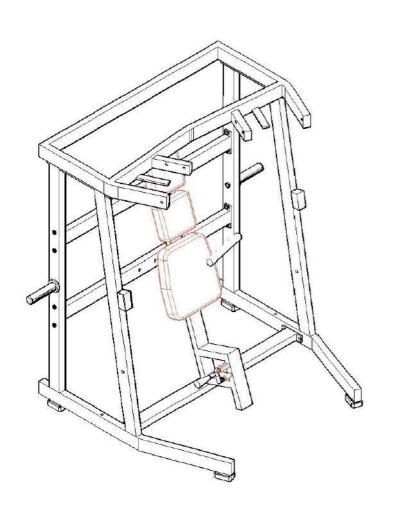


Install the seat frame.

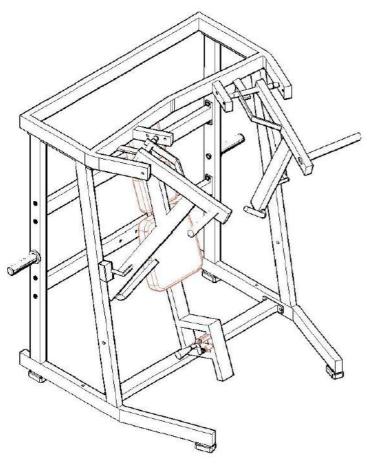

Install arms to the support for arm.

4

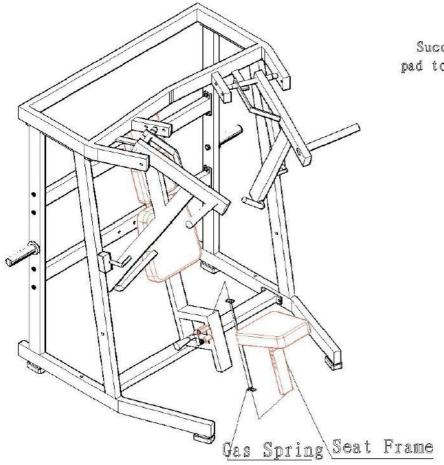

Successively put the gas spring and seat pad to the seat frame.